

# Beardsley Theater Technical Information



FRAUENTHAL  
CENTER

## LOADING DOCK:

Loading doors open to the alley between 3rd and 4th Streets. Trucks may load at right angles to the doors. No parking is allowed in the alley.

Access to the stage is by freight elevator (5'6" w x 6'9" h x 12'1"), down one floor, through shop and stage doors (6' w x 7' h). Access is also available by 8' X 8' loading door with a ramp down from the alley and a single truck dock.

## STAGE DIMENSIONS:

Proscenium Opening: width - 29' height - 19'

Stage Depth: Main drape to upstage wall - 22'

Stage Apron: Apron edge to main drape - 1'6"

Wing Space: Stage Left - 2' w x 22' d (interrupted by curtain); Stage Right - 16' w x 22' d (space obstructed by support column)

Wing-to-wing crossover located behind upstage wall.

Orchestra Pit: Depth - 4'6" width - 22' length - 10'

Stage Floor: Resilient wood on rubber sleepers

## PROPS AND DROPS:

Main Drapes - 2, velour w/fullness, 26'h x 35'w (travel, permanent)

Legs - 1 set, 26'h x 8'w w/fullness; Legs - 2 sets, 26'h x 8'w w/o fullness

1 - full black curtain w/split center ELECTRIC'S (Anyone using this system must be approved by Center Management)

## LIGHTING:

12 of ETC Series 2 lustr ellipsoidal with multiple lenses available.

12 of ETC D40 Lustr fixtures

Light Board: ECT ION

Dimmers: 48 - 2.4k

## SOUND:

(Anyone using this system must be approved by Center Management)

E.V. Bi-Amplified L/R

Yamaha LS9 32

## DRESSING ROOMS:

Basement (stage level) located down corridor stage right 3 dressing rooms with capacity of 15 each.

All have sinks, toilets, and showers.

## COMMUNICATION:

Clear-Com System - linking stage, control booth, and spot booth  
Page System - linking stage and all ancillary areas  
6 Single-muff headsets (based on availability)

Additional inventory available for rental upon request.  
Questions? Contact Tyler at 231.332.4127 or [tyler@frauenthal.org](mailto:tyler@frauenthal.org).